BRANDED MANUFACTURING B R A N D E D M F G . C O M


GENERAL MEASURING GUIDELINES FOR ALL POOL SHAPES

- Measuring a pool will be easier if you have another person helping you.
- Draining the pool will also make the process of measuring your pool easier; however, it is not always necessary, as many pools can be measured with water in them.
- Never assume a pool is standard. All pools are different. Most importantly, measure the pool for an exact fit. Actual pool measurements should be made even if original pool plans are available, due to the fact that slight variances may have occurred during construction.
- When measuring pools, do not make allowances for weather conditions, temperature, or the fact that vinyl shrinks and expands. These calculations are made when the new liner is designed.
- Supply all measurements in feet and inches, rounding up to the **nearest quarter-inch on liner-covered features**, such as steps, ledges, and benches, and rounding up to the **nearest half-inch** on all other measurements.
- Follow the "step-by-step" measuring instructions carefully, referring to all diagrams to ensure accurate measurements.
- Remember to include your name, mailing address, phone and fax numbers, and email address on each page that you send to Branded Manufacturing. You must also sign off on an approval drawing of the liner before we can begin building the liner.
- Remember to record all of your measurements and place them in the proper lines/ boxes on the proper form(s). You may need to transfer measurements you have made on the "MEASURING INSTRUCTIONS" pages onto the actual measuring form.
- Write your measurements legibly, using BLACK INK. (NO PENCIL OR FELT-TIP MARKER, PLEASE!) Make copies of all pages for your records before sending them to us. You will need to refer to your copies if we have questions regarding your measurements.
- When in doubt, give us a call at (731) 345-4500.

ONLY THE BEST GET BRANDED

MEASURING INSTRUCTIONS - STEP-BY-STEP ROMAN END POOLS


STEP #1: MEASURE THE HORIZONTAL LENGTHS SHOWN

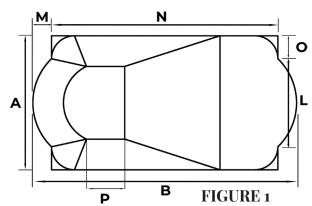

Referring to the illustration of your Roman End pool (Figure 1), be sure that the measurements are made at the bead receiver (where the liner snaps into the track), not at the edge of the coping (the edge of the pool deck). See Figure 2.


INDICATE ON THE ORDER FORM IF IT IS A SINGLE RO-MAN END OR A DOUBLE ROMAN END.


RECORD MEASUREMENTS ON THE MEASURING FORM.

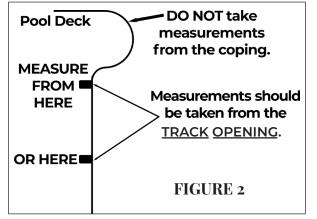

STEP #2: MEASURE THE CORNER DIAGONALS

For a True-L pool, you will need to measure the diagonals (#1, #2, & #3). Refer to Figure 3 to locate the diagonals. Remember to use the bead receiver (pool edge) as the reference point. The diagonals are often overlooked, but they are important, as few pools are perfectly square. There can be a substantial difference end-to-end in a pool, and that needs to be noted if a liner is to fit properly. (The Computer-Aid-ed-Design system that engineers your liner can adjust for out of square pools.)

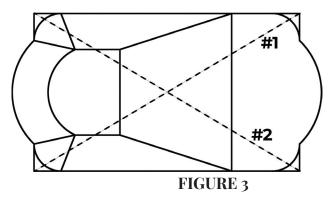

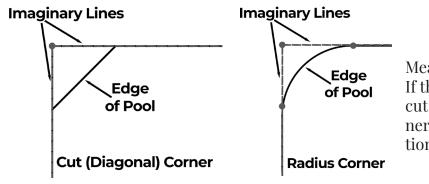

Measure the diagonals from the squared corners. If the corners of your pool are rounded (radius) or cut (diagonal), be sure to measure to squared corners. Refer to the diagrams (Figure 4) for instruction on measuring to the squared corners.

FIGURE 4


RECORD MEASUREMENTS ON THE MEASURING FORM.

STEP #3: MEASURE THE DIMENSIONS (HORIZONTALLY AND VERTICALLY)

Choose the bottom contour of your pool from the illustration shown in Figure 5 to determine which measurements you will need to take.

HOW DO I MEASURE THE BOTTOM OF THE POOL?

You will be able to make horizontal measurements of the pool bottom without entering the pool. Taking these measurements is easier than you may think when you use this easy-to-make measuring tool.

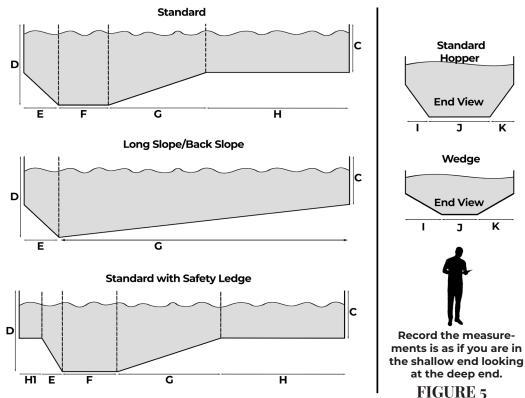

You will need:

1) A long, straight pole (telepole, pool pole, or equivalent)

- 2) String attached to the end of the pole
- 3) Some sort of weight tied to the other end of the string, such as a plumb bob

4) A measuring tape

Follow the instructions below, using your "fishing pole", to make these measurements.

Horizontal Bottom Measurements

Use your "fishing pole" to "fish" for a point on the bottom of the pool. With the pole parallel to the ends of the pool and the string vertical (allow no slack in the string), measure the distance from the edge of the pool (water's edge) to the desired measurements based on the bottom contour of your pool. For example, to take measurement I or K, you would stand on one side of the pool, and "fish" for a corner of the hopper. You would then measure the distance from the edge of the pool (pool wall) to the end of the pole where the string is attached.


Depth Measurements

When taking the depth measurements (C and D), be sure to measure from the bottom of the pool floor to the bead receiver. Do not measure to the top of the pool; otherwise, your measurement will be incorrect.

Be sure you are NOT measuring a slope when taking horizontal bottom measurements. We only use measurements parallel to the deck.


RECORD MEASUREMENTS ON THE MEASURING FORM.

DOUBLE CHECK YOUR MATH TO ENSURE THE LENGTHS EQUAL MEASURE-MENT **B** AND THE END VIEW MEASUREMENTS EQUAL **A**. IF THEY DO NOT, THE POOL AND/OR THE LINER WILL BE OUT OF SQUARE.

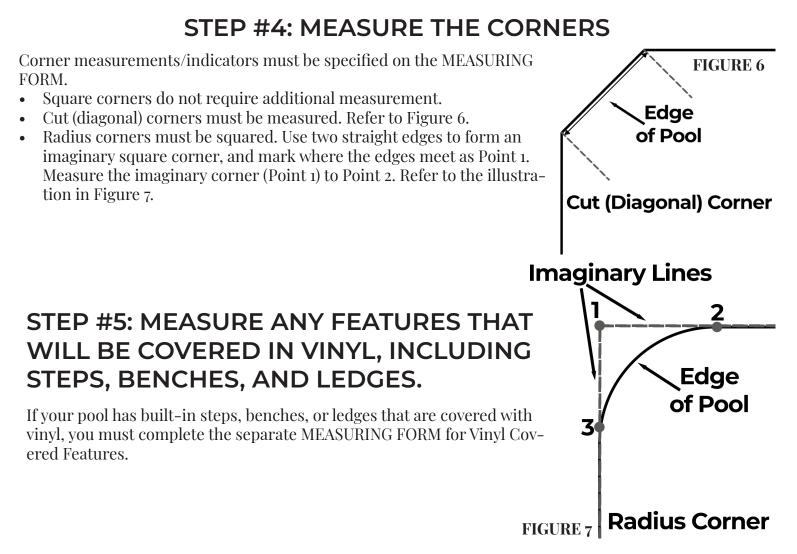

STEP #6: INDICATE WALL SEAM PLACEMENT

By default, the wall seam placement is in the center of the shallow end. However, if the pool has steps in a different location, the wall seam can be placed in the center of the step. Indicate on the MEASURING FORM where the seam should be located if other than the center shallow end.

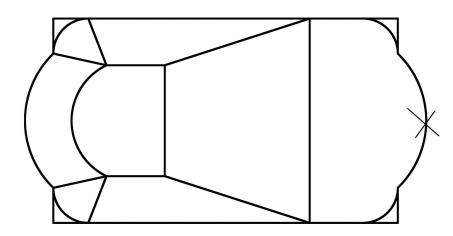

RECORD MEASUREMENTS ON THE MEASURING FORM.

BRANDED MANUFACTURING BRANDED MANUFACTURING

MEASURING FORM - ROMAN END

COMPANY/NAME:			
ADDRESS:			
CITY:STATE:	ZIP:		
PHONE (Cell): PHONE (Work): FAX: EMAIL:			
LINER DESCRIPTION:			
PATTERN: MIL:	BEAD TYPE:		
DIMENSIONS (see page 2-3)	CORNER TYPE (see page 4)		
ROMAN END: SINGLE or DOUBLE (circle one)	Square (90°)		
A (Width):	Cut (Diagonal) Size:		
B (Length):	Radius (Rounded) Size:		
Diagonal #1:	INDICATE WALL SEAM LOCATION		
Diagonal #2:	AND/OR LOCATION OF STEPS		
C (Wall Height):			
D (Depth):			
D (Depth): E (Back Slope):	K c o		
F (Hopper Length):			
G (Long Slope):			
H (Shallow End):			
I (Left Side Slope):			
J (Hopper Width):	P B		
K (Right Side Slope): L (Roman Radius Width):	P		
	COMMENTS		
M (Roman Radius Length):			
N (Rectangle Wall Length):			
O (Corner Width): P (Hopper Straight Length):	POOL LOCATION ADDRESS (REQUIRED)		
P (Hopper Straight Length):			
H1 (Safety Ledge):	P.O. #:		
	Signature:		
□ VINYL-COVERED STEPS?	Your signature indicates that you have verified your		
Please attach additional measuring forms.	measurements and that the information you have pro- vided is correct.		

BRANDED MANUFACTURING B R A N D E D M F G . C O M

MEASURING FORM - EXTERNAL IN-GROUND VINYL STEPS

COMPANY/NAME:		
ADDRESS:		
CITY:	_ STATE:	ZIP:
PHONE (Cell):	PHONE (W	Vork):
FAX: EMAIL:		
A BACK CORNERS (follow procedures fr	rom Step 4) POOL I	LOCATION ADDRESS (REQUIRED)
Square (90°)		
Cut (Diagonal) Size:		
Radius (Rounded) Size:		
B RECESS CORNERS		
$\Box Square (90°)$		
Cut (Diagonal) Size:		
Radius (Rounded) Size:		/
© STEP LOCATION		
Indicate on the picture where the ste	ps r	
are located with measurements from	the /	
squared corners.		
D DEPTH AND WIDTH	i (
Measure the total width and depth o	f the	
stairs. Include the depth of the reces		
Width: ft in Depth:ft	in	
GRISERS AND TREADS		
Measure riser heights and tread dep	ths.	Diser
R1:		
R2: T1:		/ DISEL
R3: T2:	———————————————————————————————————————	
R4:T3:	———————————————————————————————————————	
R5:T4:	———————————————————————————————————————	
B Do you need rod pockets to secure	e steps?	TOTADO NOSI
\square Yes \square No		TREADS

BRANDED MANUFACTURING BRANDED MANUFACTURING

MEASURING FORM - INTERNAL IN-GROUND VINYL STEPS

COMPANY/NAME:	
ADDRESS:	
CITY: STAT	E: ZIP:
PHONE (Cell): PH	IONE (Work):
FAX: EMAIL:	
 STEP STYLE PLEASE Full Width PROVIDE Corner DETAILED Wedding Cake Step/Bench Combo Specialty/Custom/Other 	Full Corner
 Indicate where the stairs are located. RISERS AND TREADS Measure riser heights and tread depths. 	Wedding Cake Step/Ledge Combo
R1: T1: R2: T2: R3: T2: R4: T3: R5: T4: D Please add additional information or comments below.	
POOL LOCATION ADDRESS (REQUIRED)	C Riser I Riser I Riser I Riser I Riser I Riser I

BRANDED MANUFACTURING BRANDED MANUFACTURING

MEASURING FORM - VINYL-COVERED BENCHES/LEDGES

COMPANY/NAME:	
ADDRESS:	
CITY: STA	TE: ZIP:
PHONE (Cell):	PHONE (Work):
FAX: EMAIL:	
 BENCH LOCATION Indicate where the bench is located on the drawing. Include measurements from squared corners on both sides. RISERS AND TREADS Measure riser heights and tread depths. R1: T1: R2: T3: R4: T4: Please add additional information (such as corner measurements) or comments below. 	
POOL LOCATION ADDRESS (REQUIRED)	

ONLY THE BEST GET BRANDED